


## STOP ARMS

Replacement  
Blade  
Only  
Fits All  
Vacuum, Electric, Air

LK3277



 
**VACUUM**

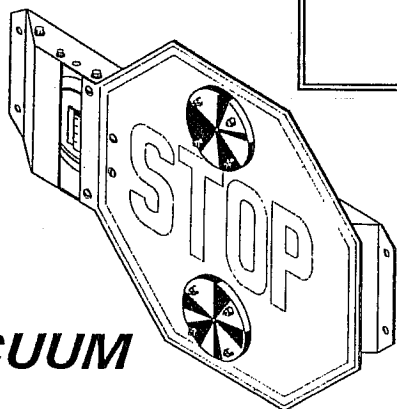


### VACUUM STOP ARMS COMPLETE

- LK3349 Painted Blade
- LK2888 Painted Blade (Rear Mount Only)
- LK3311 Reflective Blade
- LK3313 High-Intensity Reflective Blade

 For **Parts**,  
See Pages  
134, 135



 **REPLACEMENT BASE ONLY**  
(W/O Blade)  
LK3273 Vacuum - Base Only

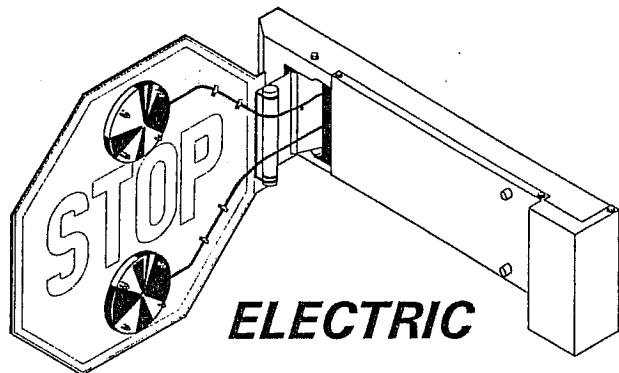


**ELECTRIC**

### ELECTRIC STOP ARMS COMPLETE


- LK3305 5-Series Painted Blade
- LK3575 6-Series Painted Blade
- LK2891 5-Series Painted Blade - Rear Mount Only
- LK3576 6-Series Painted Blade - Rear Mount Only
- LK3307 6-Series Reflective Blade
- LK3309 6-Series High-Intensity Reflective Blade

 For **Parts**,  
See Pages  
134, 137,  
138, 139

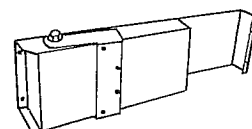

**REPLACEMENT BASE ONLY**  
(W/O Blade)  
LK3296 5-Series Electric - Base Only  
LK3573 6-Series Electric - Base Only


**AIR**

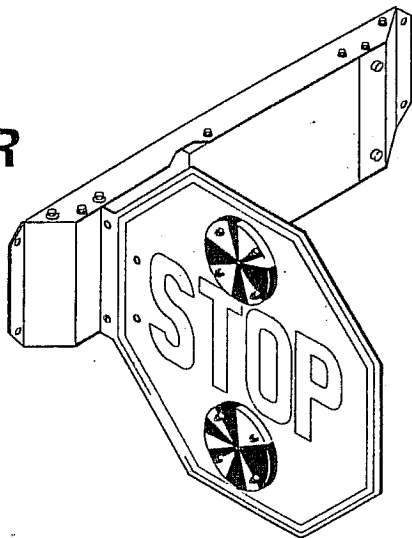 

### AIR STOP ARMS COMPLETE

- LK3298 Painted Blade
- LK2886 Painted Blade - Rear Mount Only
- LK3300 Reflective Blade
- LK3302 High-Intensity Reflective Blade

 For **Parts**,  
See Pages  
134, 136



**REPLACEMENT BASE ONLY**  
(W/O Blade)  
LK3275 Air - Base Only



- LK0719 Installation Instructions
- LK0945 How To Wire Crossing Arms
- LK0695 Troubleshoot Guide


## CROSSING ARMS
 
### CROSSING ARMS


- LK3317 5-Series Electric - w/Fig-8 Arm
- LK3318 5-Series Electric - w/Plastic Arm
- LK0704 5-Series Electric - Freightliner Only
- LK5950 6-Series Electric - w/Fig-8 Arm
- LK5945 6-Series Electric - w/Plastic Arm
- LK0705 6-Series Electric - Freightliner Only
- LK6431 6-Series Electric - IHC "IC" Only

- LK3319 Vacuum - w/Fig-8 Arm
- LK3320 Vacuum - w/Plastic Arm

- LK3315 Air - w/Fig-8 Arm
- LK3316 Air - w/Plastic Arm
- LK0707 Air - Freightliner Only

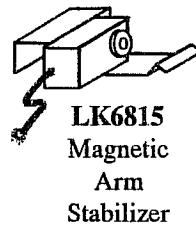



LK6815  
Magnetic  
Arm  
Stabilizer

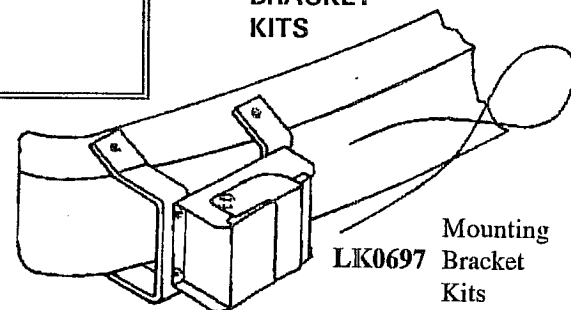 

**MOUNTING  
BRACKET  
KITS**

LK0697  
Mounting  
Bracket  
Kits

  NOTE: All mounting kits contain brackets, bolts, nuts, and hardware.

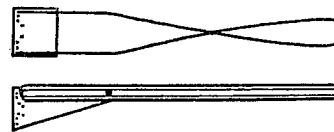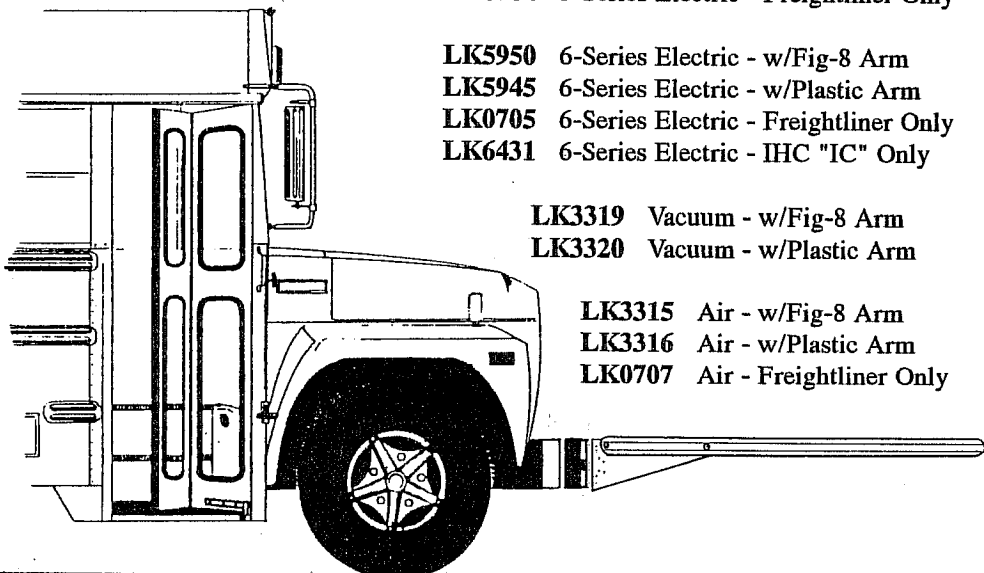

### REPLACEMENT ARM ONLY

- JK0571 Figure 8 Arm Only
- JK0572 Plastic Arm Only

### REPLACEMENT BASE ONLY (W/O Blade)

- LK3322 5-Series Electric - Base Only
- LK5940 6-Series Electric - Base Only
- LK4384 6-Series IHC "IC" - Base Only
- LK3323 Vacuum - Base Only
- LK3321 Air - Base Only
- LK0713 Air - Freightliner Base Only

