 




LK0274 Troubleshooting Guide
LK2000 Installation Tips

PARTS FOR VACUUM STOP ARMS

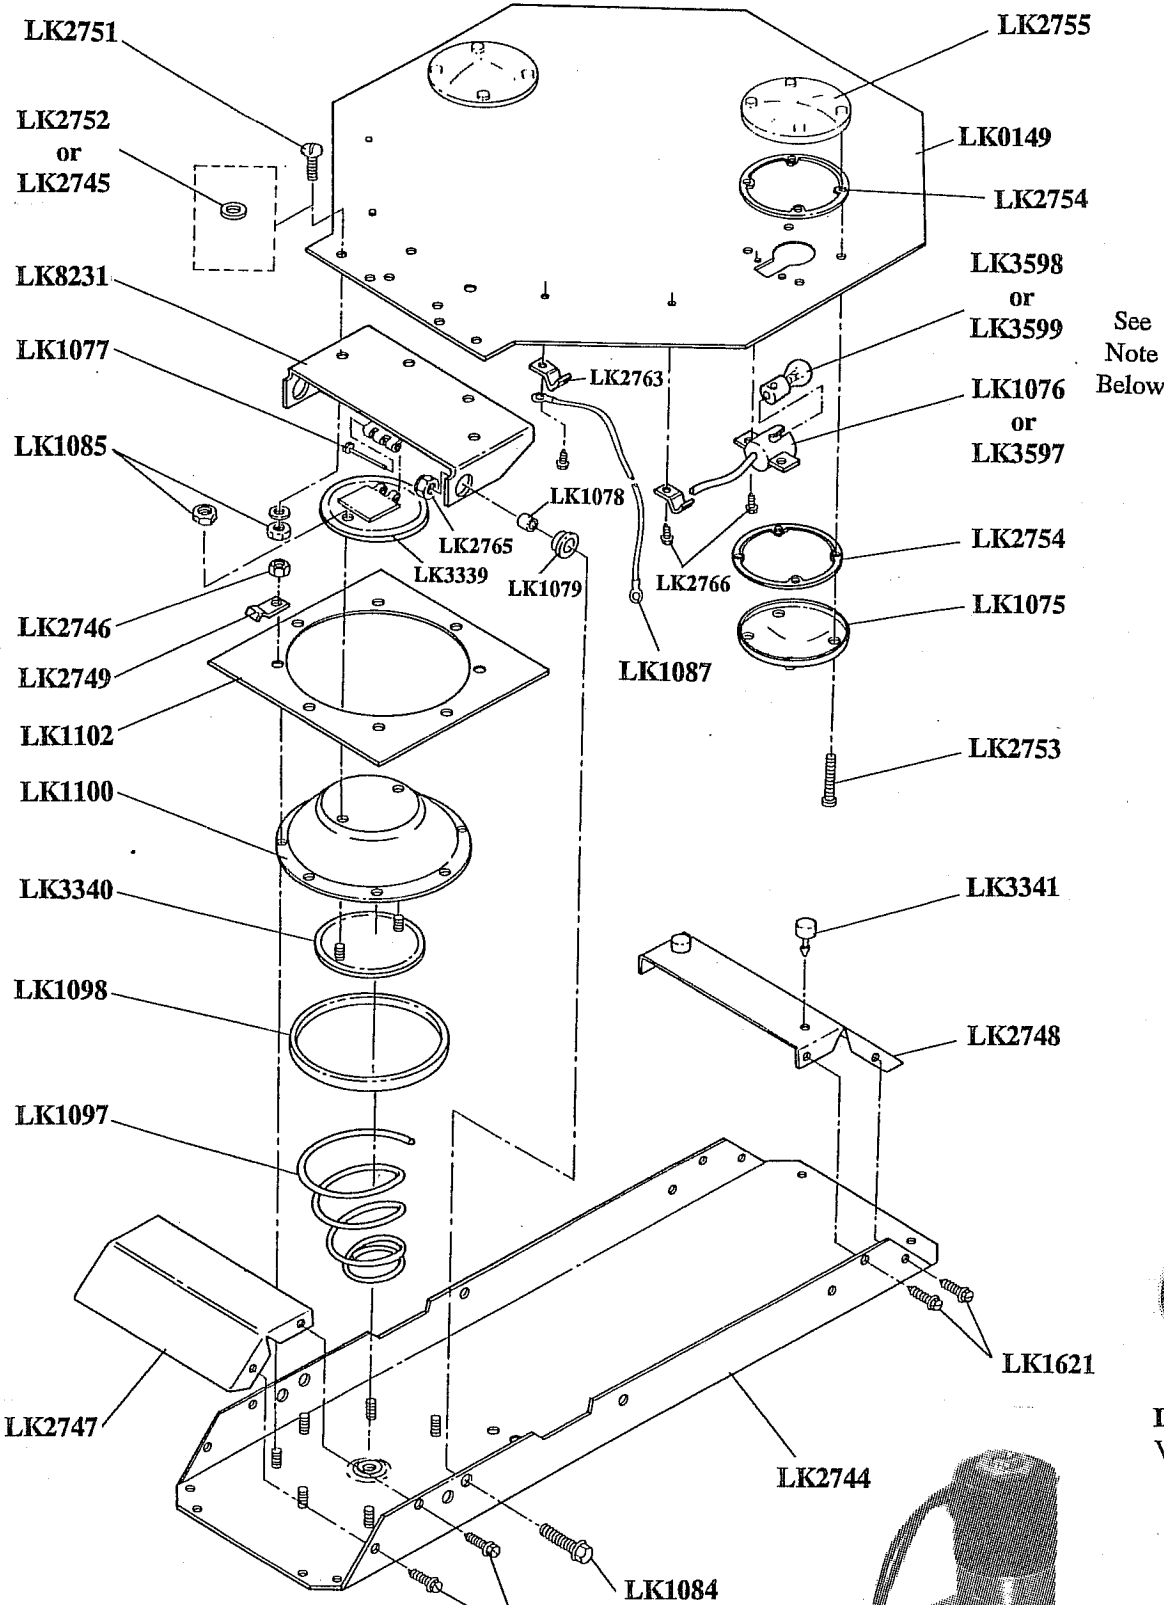

PARTS LIST

 
- LK1075 Red Lens WITH Holes
- LK1076 Socket - Single Contact
- LK1077 Hinge Pin
- LK1078 Inner Bearing
- LK1079 Outer Bearing
- LK1084 Hinge Bolt
- LK1085 Hex Nut (#1/4"-20)
- LK1087 Ground Strap
- LK1097 Diaphragm Spring
- LK1098 Diaphragm Ring
- LK1100 Diaphragm
- LK1102 Retaining Ring
- LK1621 Screw (#10x1/2)
- LK2744 Base Only
- LK2745 Flat Nylon Washer
- LK2746 Hex Nut
- LK2747 Front Cover Plate
- LK2748 Rear Cover Plate
- LK2749 Tube Clamp
- LK8231 Hinge Bracket
- LK2751 Blade Bolt
- LK2752 Lockwasher 1/4"
- LK2753 Lens Bolt
- LK2754 Lens Gasket
- LK2755 Red Lens W/O Holes
- LK2763 Tube Clamp
- LK2765 Nylon Locknut
- LK2766 Hex Screw
- LK3339 Outer Diaphragm Plate
- LK3340 Inner Diaphragm Plate
- LK3341 Plate Bumper
- LK3597 Socket - Double Contact
- LK3598 Bulb - Double Contact
- LK3599 Bulb - Single Contact

See Note Below

COMPLETE BASE ASSEMBLY
With All Hardware
Does Not Include Blade

- LK3273 Vacuum Base Assembly
- LK3274 Vacuum Base Assembly with "Single-Flash" Type Strobe Power-Pack
- LK3572 Vacuum Base Assembly with Hi/Lo Strobe Power Pack

LK2762 LENS KIT
Includes:
(2) Lens
(2) Gaskets
(4) Screws

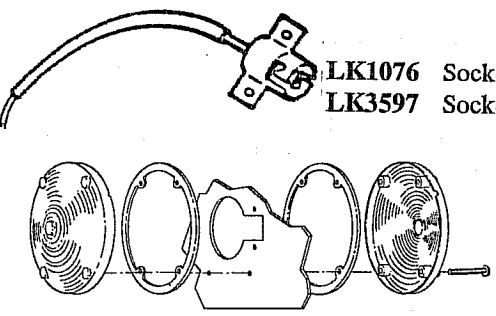


LK1076 Socket --- Single Contact
LK3597 Socket --- Double Contact

- LK3599 Single Contact Box of 10
- LK3598 Double Contact Box of 10


Electric Valve Solenoid Operated For Vacuum Arms Only



 
LK1087 Ground Strap

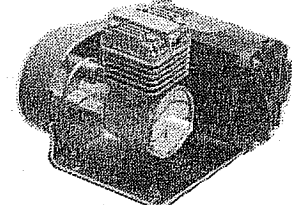


LK3356 Vacuum Pump

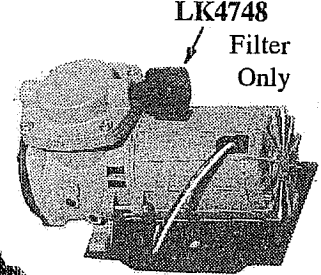 


LK4748 Filter Only

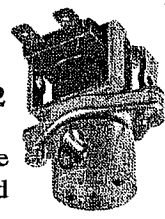 


LK3332 Electric Valve Solenoid Operated

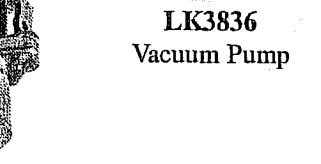 


LK3836 Vacuum Pump

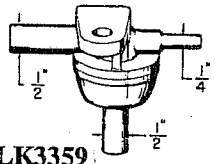 


LK3359 Check Valve

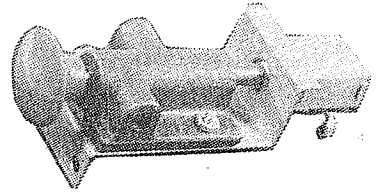 

LK1092 Stop Arm Valve with Switch

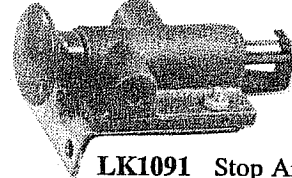 

 LK1091 Stop Arm Valve LK1080 Red Knob Only

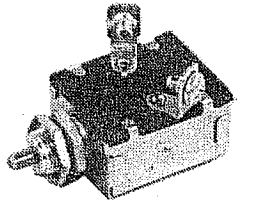

LK1090 Switch for Rear of Stop Arm Valve